

# **APPLICATION GUIDE**

- Precision Crafted Steel
- Package Color Coded for
- Lustrous Chrome Plating
- Easy Thread Identification

**EASY SELECTIVE STEPS**

**1-2-3**




**White Knight**


Wheel Accessories

# STEP 1


## IDENTIFY STYLE OF LUG NUT OR LOCK NEEDED FOR YOUR VEHICLE

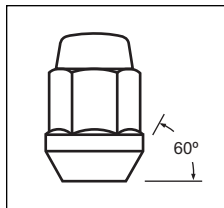

Conical Seat  
Wheels require a  
conical seat nut or  
lock.

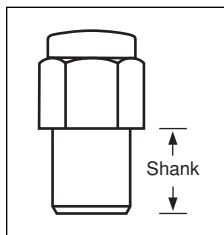


Mag Wheels  
require a straight  
shank nut or lock  
with washers.

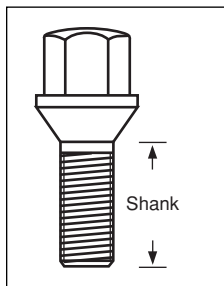


Some European  
makes of vehicle  
wheels require lug  
bolt. Available in  
cone seat and ball  
seat.


## ***CONE SEAT***

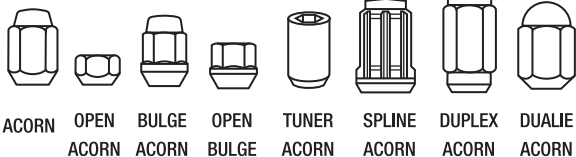


## ***MAG SEAT***

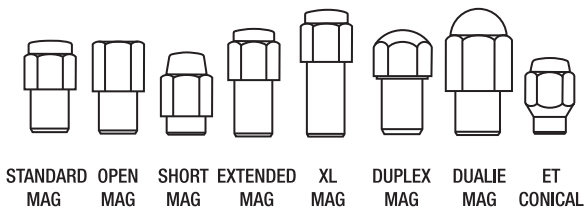

## ***LUG BOLT***



CONE  
SEAT



BALL  
SEAT

## STEP 2

### ***CONFIRM PROPER THREAD SIZE.***

- Find your vehicle in this application guide by MAKE AND MODEL then by year.
- Determine the correct thread size.

<b>MAKE AND MODEL</b>	<b>YEAR</b>	<b>THREAD SIZE</b>
<b>ACURA</b>		
ALL	1986-On	12mm X 1.50
<b>AUDI</b>		
ALL	1988-On	14mm x 1.50 Bolt
<b>ALFA ROMEO</b>		
ALL	1972-On	12mm X 1.50
<b>AMC</b>		
ALL	1958-1982	1/2"

## STEP 3

***FIND THE LUG NUT OR WHEEL LOCK YOU NEED.***

**WHITE KNIGHT** Lug nuts and wheel locks are packaged color coded for easy thread identification.



color  
code

	7/16" R.H.
	1/2" R.H.
	9/16" R.H.
	12mm x 1.25 R.H.
	12mm x 1.50 R.H.
	14mm x 1.50 R.H.
	14mm x 2.0 R.H.
	12mm x 1.75 R.H.
	14mm x 1.25 R.H.

# THREAD SIZE APPLICATION GUIDE

***This is ONLY a guide. To insure proper fit, refer to your stock lug nut to determine the correct thread size for your vehicle.***

Information provided within comes from various sources. It should be understood that while this information is accurate to the best of our knowledge, it is only a guide. The company cannot be held liable for any of the recommendations made within. The expertise and judgment of installer of the wheel and tire package always overrides any recommendations in this guide.

<b>MAKE AND MODEL</b>	<b>YEAR</b>	<b>THREAD SIZE</b>
<b>ACURA</b>		
ALL (Except Below)	1986-0n	12mm x 1.50
MDX	2002-2006	12mm x 1.50
MDX	2007-0n	14mm x 1.50
RL	2005-0n	14mm x 1.50
TL	2004-2008	12mm x 1.50
TL	2009-0n	14mm x 1.50
<b>ALFA ROMEO</b>		
ALL	1972-0n	12mm x 1.50
<b>AMC</b>		
ALL ( Except Below )	1958-1982	1/2"
Alliance & Encore	1983-0n	12mm x 1.50

<b>MAKE AND MODEL</b>	<b>YEAR</b>	<b>THREAD SIZE</b>
<b>AUDI</b>		
ALL ( Except Below )	1988-On	14mm x 1.50 Bolt
4000	1980-1987	12mm x 1.50 Bolt
<b>BMW</b>		
ALL	1962-1976	12mm x 1.50
ALL ( Except Below )	1977-On	12mm x 1.50 Bolt
7 Series	2002-2008	14mm x 1.50 Bolt
7 Series	2009-On	14mm x 1.25 Bolt
X3	2003-On	14mm x 1.50 Bolt
X5	2000-2006	14mm x 1.50 Bolt
X5	2006-On	14mm x 1.25 Bolt
X6	2008-On	14mm x 1.25 Bolt
<b>BUICK</b>		
All Front Wheel Drive	1979-1989	12mm x 1.50
Allure	2005-On	12mm x 1.50
Apollo	1973-1981	7/16"
Century	1973-1981	7/16"
Century	1982-On	12mm x 1.50
Electra	1958-1984	1/2"
Electra	1985-1991	12mm x 1.50
Enclave	2008-On	14mm x 1.50
Grand Sport	1961-1982	7/16"
Lacrosse	2005-On	12mm x 1.50

<b>MAKE AND MODEL</b>	<b>YEAR</b>	<b>THREAD SIZE</b>
Le Sabre	1961-1976	1/2"
Le Sabre	1977-1985	7/16"
Le Sabre (Station Wagon, V8)	1977-1990	1/2"
Le Sabre	1986-2005	12mm x 1.50
Lucerne	2006-On	12mm x 1.50
Limited	1980-On	12mm x 1.50
Opel	1968-1979	12mm x 1.50
Park Avenue	1984-2005	12mm x 1.50
Rainier	2004-On	12mm x 1.50
Reatta	1988-1992	12mm x 1.50
Regal	1977-1981	7/16"
Regal	1982-2004	12mm x 1.50
Rendezvous	2002-On	12mm x 1.50
Riviera	1963-1978	1/2"
Riviera	1979-1999	12mm x 1.50
Roadmaster	1991-1996	12mm x 1.50
Skyhawk	1975-1981	7/16"
Skyhawk	1982-1991	12mm x 1.50
Skylark	1962-1979	7/16"
Skylark, Somerset	1980-1998	12mm x 1.50
Special & Special Wagon	1967-1977	7/16"
Terraza	2005-On	12mm x 1.50

<b>MAKE AND MODEL</b>	<b>YEAR</b>	<b>THREAD SIZE</b>
<b>CADILLAC</b>		
All Front Wheel Drive	1979-0n	12mm x 1.50
Allante	1979-1993	12mm x 1.50
Brougham	1987-1990	1/2"
Brougham	1991-1995	12mm x 1.50
Catera	1997-2002	12mm x 1.50 Bolt
Cimarron	1981-1988	12mm x 1.50
CTS, CTS-V	2003-2007	12mm x 1.50
CTS, CTS-V	2008-0n	14mm x 1.50
Deville (RWD)	1962-1985	1/2"
Deville (FWD)	1986-2005	12mm x 1.50
DTS	2006-0n	12mm x 1.50
El Dorado	1953-1978	1/2"
El Dorado	1979-2002	12mm x 1.50
Escalade	1999-0n	14mm x 1.50
Fleetwood (RWD)	1960-1986	1/2"
Fleetwood (FWD)	1987-1996	12mm x 1.50
Seville	1975-1976	7/16"
Seville	1977-1979	1/2"
Seville	1980-0n	12mm x 1.50
SRX, XLR, XLR-V	2004-0n	12mm x 1.50
STS, STS-V	2005-0n	12mm x 1.50

<b>MAKE AND MODEL</b>	<b>YEAR</b>	<b>THREAD SIZE</b>
-----------------------	-------------	--------------------

### **CHEVROLET/GEO**

Aveo	2004-0n	12mm x 1.50
Bel Air, Biscayne	1954-1970	7/16"
Bel Air, Biscayne	1971-1976	1/2"
Beretta	1988-1996	12mm x 1.50
Camaro	1967-1981	7/16"
Camaro	1982-2002	12mm x 1.50
Camaro	2010-0n	14mm x 1.50
Caprice	1968-1976	1/2"
Caprice	1977-1990	7/16"
Caprice (Station Wagon & V8)	1977-1990	1/2"
Caprice and Wagon	1991-1996	12mm x 1.50
Cavalier, Celebrity, Corsica	1982-2005	12mm x 1.50
Chevelle	1964-1976	7/16"
Chevette	1976-1987	12mm x 1.50
Citation	1980-1985	12mm x 1.50
Cobalt	2005-0n	12mm x 1.50
Corvette	1953-1983	7/16"
Corvette	1984-0n	12mm x 1.50
Epica, Optra	2004-2007	12mm x 1.50
Equinox	2005-0n	12mm x 1.50
Geo Metro	1990-1994	10mm x 1.25
Geo Metro	1995-2001	12mm x 1.25
Geo Metro Convertible	1990-1993	12mm x 1.25

<b>MAKE AND MODEL</b>	<b>YEAR</b>	<b>THREAD SIZE</b>
Geo Prizm, Storm	1990-2002	12mm x 1.50
Geo Tracker	1989-2004	12mm x 1.25
HHR	2006-0n	12mm x 1.50
Impala	1958-1970	7/16"
Impala	1971-1976	1/2"
Impala	1977-1984	7/16"
Impala (Station Wagon & V8)	1977-1984	1/2"
Impala	1993-0n	12mm x 1.50
Laguna, Monza & Vega	1965-1981	7/16"
Lumina, Lumina APV	1989-2001	12mm x 1.50
Malibu	1964-1981	7/16"
Malibu	1982-0n	12mm x 1.50
Metro	1995-2001	12mm x 1.25
Monte Carlo	1970-1981	7/16"
Monte Carlo	1982-0n	12mm x 1.50
Nova, Chevy II	1962-1979	7/16"
Nova	1986-1989	12mm x 1.50
Spectrum	1985-1989	12mm x 1.50
SSR	2004-2006	12mm x 1.50
<b>CHEVROLET/GMC TRUCKS &amp; SUV</b>		
Acadia	2007-0n	14mm x 1.50
Avalanche	2002-0n	14mm x 1.50
Astro Van	1985-2002	1/2"
Astro Van	2003-2005	14mm x 1.50

<b>MAKE AND MODEL</b>	<b>YEAR</b>	<b>THREAD SIZE</b>
Blazer 4X4 (6 Lug)	1971-1991	7/16"
Blazer 2 W/D (5 Lug)	1971-1991	1/2"
Blazer	1992-1994	14mm x 1.50
S-10 Blazer	1983-2005	12mm x 1.50
S-10	1983-2004	12mm x 1.50
Caballero, El Camino	1964-1981	7/16"
Caballero, El Camino	1982-1987	12mm x 1.50
Canyon	2004-On	12mm x 1.50
C-10	1971-1988	1/2"
C-1500 (5 Lug)	1971-1987	1/2"
Chevy 3/4 Ton Van (5 Lug)	1960-1981	1/2"
Colorado	2004-On	12mm x 1.50
Envoy	1999-On	12mm x 1.50
Express Van, Denali	1996-On	14mm x 1.50
Equinox	2005-On	12mm x 1.50
Jimmy (5 Lug)	1969-1970	7/16"
Jimmy (5 Lug)	1971-1991	1/2"
Jimmy (6 Lug)	1971-1991	7/16"
Luv	1972-1984	12mm x 1.50
Pickup (5 Lug)	1971-1987	1/2"
Pickup (6 Lug)	1937-1987	7/16"
Pickup (8 Lug)	1965-1987	1/2" or 9/16"
Pickups (All)	1988-On	14mm x 1.50
S-15, Sonoma & Jimmy	1983-On	12mm x 1.50

<b>MAKE AND MODEL</b>	<b>YEAR</b>	<b>THREAD SIZE</b>
Safari	1985-2002	1/2"
Safari	2003-2005	14mm x 1.50
Savana	1992-0n	14mm x 1.50
Silverado	1996-0n	14mm x 1.50
Sierra	1999-0n	14mm x 1.50
Sprint	1964-1981	7/16"
SSR	2004-2006	12mm x 1.50
Suburban (5 Lug)	1969-1970	7/16"
Suburban (5 Lug)	1971-1991	1/2"
Suburban (6 Lug)	1969-1991	7/16"
Suburban (8 Lug)	1969-1991	9/16"
Suburban, Yukon All	1992-0n	14mm x 1.50
Tahoe	1995-0n	14mm x 1.50
Tracker	1989-2004	12mm x 1.25
Traverse	2009-0n	14mm x 1.50
Trail Blazer, Traiblazer XL	2002-0n	12mm x 1.50
Uplander	2005-0n	12mm x 1.50
Van/Express	1996-0n	14mm x 1.50
Van 5 Lug (Except Express & Savana)	1971-1996	1/2"
Van 6 Lug (Except Express & Savana)	1971-1996	7/16"
Van 8 Lug (Except Express & Savana)	1965-1996	1/2" or 9/16"
Ventura Minivan	1997-2005	12mm x 1.50
Yukon, Yukon Denali	2000-0n	14mm x 1.50

<b>MAKE AND MODEL</b>	<b>YEAR</b>	<b>THREAD SIZE</b>
-----------------------	-------------	--------------------

### **CHRYSLER**

300, 300C	2005-On	14mm x 1.50
300M	1999-2004	12mm x 1.50
300M	2005-On	14mm x 1.50
Aspen	2007-On	9/16"
Cirrus	1995-2001	12mm x 1.50
Concorde, LHS	1993-2004	12mm x 1.50
Cordoba, Mirada & Newport	1971-On	1/2"
Crossfire	2004-On	12mm x 1.50 Bolt
E-Class	1981-1988	12mm x 1.50
Imperial	1990-1995	12mm x 1.50
Le Baron	1982-1995	12mm x 1.50
New Yorker (FWD)	1983-1998	12mm x 1.50
New Yorker Fifth Ave.	1971-1992	1/2"
Pacifica	2004-On	12mm x 1.50
PT Cruiser	2000-On	12mm x 1.50
Sebring	1995-On	12mm x 1.50
Town & Country	1982-On	12mm x 1.50
Windsor	1960-1961	1/2"

### **DAEWOO**

Lanos	1999-2002	12mm x 1.50 Bolt
Leganza, Nubira	2000-2002	12mm x 1.50

<b>MAKE AND MODEL</b>	<b>YEAR</b>	<b>THREAD SIZE</b>
<b>DAIHATSU</b>		
ALL		12mm x 1.50
<b>DODGE</b>		
400, 600, 600ES, Aries	1981-1984	12mm x 1.50
Aspen & Demon	1973-1980	1/2"
Avenger	1995-On	12mm x 1.50
Caliber	2007-On	12mm x 1.50
Caravan, Grand Caravan	1982-On	12mm x 1.50
Challenger	1971-1977	1/2"
Challenger	1978-1983	12mm x 1.50
Challenger	2009-On	14mm x 1.50
Charger	1966-1970	1/2"
Charger	1971-1976	1/2"
Charger	1978-1988	12mm x 1.50
Charger	2006-On	14mm x 1.50
Colt, Lancer	1970-1993	12mm x 1.50
Conquest	1982-1988	12mm x 1.50
Coronet	1965-1977	1/2"
D50	1975-1994	12mm x 1.50
Dart	1960-1964	1/2"
Dart (w/out disc brakes)	1971-1976	7/16"
Dart (w/disc brakes)	1971-1976	1/2"
Daytona, Monaco, Shelby	1981-1994	12mm x 1.50

<b>MAKE AND MODEL</b>	<b>YEAR</b>	<b>THREAD SIZE</b>
Diplomat	1977-1988	1/2"
Dynasty	1988-1995	12mm x 1.50
Intrepid	1993-2004	12mm x 1.50
Journey	2009-On	12mm x 1.50
Magnum	2005-On	14mm x 1.50
Mirada, St. Regis, Swinger	1971-1983	1/2"
Neon, SRT-4	1994-2005	12mm x 1.50
Nitro	2007-On	1/2"
Omni, O24, De Tomaso	1978-1991	12mm x 1.50
Shadow & Spirit	1987-1995	12mm x 1.50
Stealth	1991-1996	12mm x 1.50
Stratus	1995-2006	12mm x 1.50
Viper	1992-On	1/2"

### **DODGE TRUCKS & SUV**

B-100, W-100 & W-150	1970-On	1/2"
Dakota	1987-2004	1/2"
Dakota	2005-On	9/16"
Durango	1998-2003	1/2"
Durango	2004-On	9/16"
Pickup	1971-1993	1/2"
Pickup	2002-On	9/16"
Pickup 1500	1994-2001	1/2"
Pickup 1500	2002-On	9/16"

<b>MAKE AND MODEL</b>	<b>YEAR</b>	<b>THREAD SIZE</b>
Pickup 2500 & 3500	1994-On	9/16"
Raider	1987-1989	12mm x 1.50
Ram Charger	1971-1992	1/2"
Ram 50, Dodge 4WD P/U, 400 Rampage & Caravan 600	1982-On	12mm x 1.50
SRT-10	2004-On	9/16"
Sprinter Wagon	2004-On	14mm x 1.50 Bolt
Van	1971-2003	1/2"
Van 2500, 3500	1994-2003	9/16"

### **EAGLE**

ALL	1988-On	12mm X 1.50
-----	---------	-------------

### **FORD**

Aspire	1995-1997	12mm x 1.50 Bolt
Contour	1995-2001	12mm X 1.50
Courier	1977-1983	12mm x 1.50
Crown Victoria, LTD,	1960-On	1/2"
Custom, Fairlane, Fairmont, Falcon, Futura, Galaxie, Granada, Maverick, Pinto & Torino	ALL	1/2"
Edge	2007-On	1/2"
Escort, EXP	1981-1983	1/2"
Escort, EXP, Festiva, ZX2	1984-On	12mm X 1.50
Fiesta	1977-On	12mm X 1.50

<b>MAKE AND MODEL</b>	<b>YEAR</b>	<b>THREAD SIZE</b>
Five Hundred	2005-On	1/2"
Focus	2000-On	12mm x 1.50
Fusion	2006-On	12mm x 1.50
Mustang	1965-On	1/2"
Probe	1988-2008	12mm x 1.50
Tempo	1984-1994	12mm x 1.50
Taurus	1986-2007	12mm x 1.50
Taurus	2008-On	1/2"
Thunderbird	1955-1988	1/2"
Thunderbird	1989-On	12mm X 1.50

### **FORD TRUCKS & SUV**

Aerostar	1986-1997	1/2"
Bronco, Club Wagon, F-100	ALL	1/2"
Courier	1977-1983	12mm x 1.50
Escape	2001-On	12mm x 1.50
Excursion	2000-2002	14mm x 2.00
Excursion	2003-On	14mm x 1.50
Expedition, F-150, F-250	1997-1999	12mm x 1.75
Expedition, F-150	2000-On	14mm x 2.00
Explorer	1991-On	1/2"
Flex	2009-On	1/2"
Freestar	2004-On	1/2"
Freestyle	2005-On	1/2"

<b>MAKE AND MODEL</b>	<b>YEAR</b>	<b>THREAD SIZE</b>
F-150	1960-1996	1/2"
F-250	1981-1996	1/2" or 9/16"
F-250	2000-2002	14mm x 2.00
F-250	2003-On	14mm x 1.50
F-350	1981-1996	9/16"
F-350, F-450, F-550	1997-2002	14mm x 2.00
F-350, F-450, F-550	2003-On	14mm x 1.50
Ranchero	ALL	1/2"
Ranger	1983-On	1/2"
Van ( E50, E100, E200 )	ALL	1/2"
Van ( E250, E350 )	ALL	9/16"
Windstar	1994-2003	12mm x 1.50

## **GMC**

See Chevrolet

## **HONDA**

ALL	1976-1980	12mm x 1.50
ALL ( Except Below )	1980-On	12mm x 1.50
Odyssey, Ridgeline	2005-On	14mm x 1.50
Pilot	2009-On	14mm x 1.50

## **HUMMER**

Hummer H1, H2	2003-On	14mm x 1.50
Hummer H3	2005-On	12mm x 1.50

## **HYUNDAI**

ALL		12mm x 1.50
-----	--	-------------

<b>MAKE AND MODEL</b>	<b>YEAR</b>	<b>THREAD SIZE</b>
<b>INFINITI</b>		
ALL		12mm x 1.25
<b>ISUZU</b>		
ALL		12mm x 1.50
<b>JAGUAR</b>		
ALL ( Except Below )	1976-On	1/2"
S and X Type, XJ	1999-On	12mm x 1.50
XF Type	2008-On	12mm x 1.50
<b>JEEP</b>		
All (5 Lug)		1/2"
All (6 Lug)		7/16"
All (8 Lug)		1/2"
Commander	2006-On	12mm x 1.50
Compass, Patriot	2007-On	12mm x 1.50
<b>KIA</b>		
ALL ( Except Below)		12mm x 1.50
Rio	2001-2002	12mm x 1.50 Bolt
<b>LAND ROVER</b>		
ALL ( Except Below )		14mm x 1.50
Freelander	2002-2005	12mm x 1.50
<b>LEXUS</b>		
ALL ( Except Below )	1990-On	12mm x 1.50
GX470	2004-On	14mm x 1.50

<b>MAKE AND MODEL</b>	<b>YEAR</b>	<b>THREAD SIZE</b>
LS460, LS460L	2007-0n	14mm x 1.50
LS600hL	2008-0n	14mm x 1.50
LX470	1999-2003	14mm X 1.50
LX570	2008-0n	14mm x 1.50

### **LINCOLN**

Aviator, Town Car	ALL	1/2"
Blackwood	2002-2003	14mm x 2.00
Continental	1939-1987	1/2"
Continental	1988-2002	12mm x 1.50
LS	2000-2006	12mm x 1.50
Mark	1967-1992	1/2"
Mark LT	2006-0n	14mm x 2.00
Mark VIII	1993-1998	12mm x 1.50
MKS	2009-0n	1/2"
MKX	2007-0n	1/2"
MKZ	2007-0n	12mm x 1.50
Navigator	1997-1999	12mm x 1.75
Navigator	2000-0n	14mm x 2.00
Zephyr	2006-0n	12mm x 1.50

### **MAZDA**

All ( Except Below )	ALL	12mm x 1.50
Pickup B2300, B2500, B3000, B4000 & Navajo	1993-0n	1/2"

<b>MAKE AND MODEL</b>	<b>YEAR</b>	<b>THREAD SIZE</b>
<b>MERCEDES</b>		
All ( Except Below )	ALL	12mm x 1.50 Bolt
500 SEL	1992-On	14mm x 1.50 Bolt
C Class	2008-On	14mm x 1.50 Bolt
CL Class	2003-On	14mm x 1.50 Bolt
CLS Class	2006-On	14mm x 1.50 Bolt
G Class	2002-On	14mm x 1.50 Bolt
GL Class	2007-On	14mm x 1.50 Bolt
GLK Class	2010-On	12mm x 1.50 Bolt
E Class	2002-On	14mm x 1.50 Bolt
M Class	1998-On	14mm x 1.50 Bolt
R Class	2006-On	14mm x 1.50 Bolt
S Class, SL Class	2001-On	14mm x 1.50 Bolt
<b>MERCURY</b>		
Bobcat	1975-1981	1/2"
Capri	1979-1990	1/2"
Capri	1991-1994	12mm x 1.50
Cornet	1963-1980	1/2"
Cougar	1967-1988	1/2"
Cougar	1989-2002	12mm x 1.50
Cyclone	1963-1987	1/2"
Grand Marquis	1979-On	1/2"
LN7 & Lynx	1981-1983	1/2"

<b>MAKE AND MODEL</b>	<b>YEAR</b>	<b>THREAD SIZE</b>
LN7 & Lynx	1983-1987	12mm X 1.50
Marauder	2003-2004	1/2"
Mariner	2005-0n	12mm x 1.50
Marquis	1967-1990	1/2"
Milan	2006-0n	12mm x 1.50
Montego	1968-0n	1/2"
Monterey	2004-2006	1/2"
Mountaineer	1977-0n	1/2"
Mystique, Topaz, Tracer	ALL	12mm x 1.50
Sable	1986-2005	12mm x 1.50
Sable	2008-0n	1/2"
Villager	1993-2003	12mm x 1.25
<b>MERKUR</b>		
ALL		12mm x 1.50
<b>MINI</b>		
Cooper, Cooper S	2002-2006	12mm x 1.50 Bolt
ALL	2007-0n	14mm x 1.25 Bolt
<b>MG</b>		
ALL		1/2"
<b>MITSUBISHI</b>		
ALL		12mm x 1.50
Raider	2006-0n	9/16"

---

<b>MAKE AND MODEL</b>	<b>YEAR</b>	<b>THREAD SIZE</b>
-----------------------	-------------	--------------------

---

### **NISSAN (DATSUN)**

ALL ( Except Below )	1972-0n	12mm x 1.25
1600, 2000	1965-1971	7/16"

---

### **OLDSMOBILE**

ALL (Except Below)		12mm x 1.50
98	1960-1984	1/2"
Bravada	2002-2004	14mm x 1.50
Custom Cruiser	1981-1990	1/2"
Custom Cruiser	1991-1995	12mm x 1.50
Cutlass, F85	1964-1981	7/16"
Cutlass	1982-1999	1/2"
Delta 88	1977-1985	7/16"
Delta 88 (Station Wagon & V8)	1977-1985	1/2"
Delta 88	1986-0n	12mm x 1.50
Tornado	1966-1978	1/2"
Tornado	1979-1996	12mm x 1.50

---

### **PEUGEOT**

ALL		12mm x 1.25
-----	--	-------------

---

### **PLYMOUTH**

ALL (Except Below)		12mm x 1.50
Barracuda	1971-1976	7/16" or 1/2"
Belvedere	1971-1976	1/2"
Duster	1973-1980	1/2"

---

<b>MAKE AND MODEL</b>	<b>YEAR</b>	<b>THREAD SIZE</b>
Duster & Dart	1963-1974	7/16"
Fury, GTX & Road Runner & Satellite	1971-1989	1/2"
Trailduster, Van	1976-1988	1/2"
Valiant	1971-1976	7/16" or 1/2"
Voyager	1984-On	12mm x 1.50
Voyager 4x4	1974-1983	1/2"

### **PONTIAC**

ALL (Except Below)		12mm x1.50
Bonneville, Catalina	1960-1976	1/2"
Bonneville, Catalina	1977-1981	7/16"
Bonneville (Station Wagon &V8)	1977-1981	1/2"
Bonneville	1982-2005	12mm x 1.50
Firebird	1967-1981	7/16"
Firebird	1982-2002	12mm x 1.50
G8	2008-On	14mm x 1.50
Grand Am, Grand Prix	1969-1981	7/16"
Grand Am	1985-2005	12mm x 1.50
Grand Prix	1982-On	12mm x 1.50
Lemans, Tempest	1964-1981	7/16"

### **PORSCHE**

ALL ( Except Below)	1965-1997	14mm x 1.50
911, 914, 924, Boxster Cayman S, Cayenne	1997-On	14mm x 1.50 Bolt

<b>MAKE AND MODEL</b>	<b>YEAR</b>	<b>THREAD SIZE</b>
-----------------------	-------------	--------------------

### **RENAULT**

Alliance, Encore & Medallion	ALL	12mm x 1.50
------------------------------	-----	-------------

### **SAAB**

9-2X	2005-On	12mm x 1.25
9-7X	2005-On	12mm x 1.50
900, 900 Turbo	1979-1987	1/2"
900, 900 Turbo	1988-1993	14mm x 1.50 Bolt
900, 9-3, 9-5	1994-On	12mm x 1.50 Bolt
9000	1986-On	14mm x 1.50 Bolt

### **SATURN**

ALL (Except Below)	1991-On	12mm x 1.50
LS	1999-2004	12mm x 1.50 Bolt
Outlook	2007-On	14mm x 1.50

### **SCION**

ALL	2004-On	12mm x 1.50
-----	---------	-------------

### **SMART**

Fortwo	2005-On	12mm x 1.50
--------	---------	-------------

### **STERLING**

ALL	12mm x 1.50
-----	-------------

### **SUBARU**

ALL	12mm x 1.25
-----	-------------

### **SUZUKI**

ALL ( Except Below )	ALL	12mm x 1.25
----------------------	-----	-------------

<b>MAKE AND MODEL</b>	<b>YEAR</b>	<b>THREAD SIZE</b>
Forenza, Verona	2004-0n	12mm x 1.50
Reno	2005-0n	12mm x 1.50
Swift	1995-2001	12mm x 1.25
Swift	2004-0n	12mm x 1.50

### **TOYOTA**

ALL (Except Below)		12mm x 1.50
Land Cruiser	1998-0n	14mm x 1.50
Sequoia	2008-0n	14mm x 1.50
Tundra	2007-0n	14mm x 1.50

### **VOLKSWAGEN**

ALL (Except Below)	ALL	12mm x 1.50 Bolt
Beetle	1968-0n	14mm x 1.50 Bolt
Eos	2007-0n	14mm x 1.50 Bolt
Eurovan MV	1993-1996	14mm x 1.50 Bolt
Golf, GTI	1999-0n	14mm x 1.50 Bolt
Jetta	1981-1998	12mm x 1.50 Bolt
Jetta VR6	1993-2005	14mm x 1.50 Bolt
Jetta	1999-0n	14mm x 1.50 Bolt
Passat	1990-1997	12mm x 1.50 Bolt
Passat VR6	1992-1997	14mm x 1.50 Bolt
Passat	1998-0n	14mm x 1.50 Bolt
Phaeton	2004-2005	14mm x 1.50 Bolt
Rabbit	2007-0n	14mm x 1.50 Bolt


<b>MAKE AND MODEL</b>	<b>YEAR</b>	<b>THREAD SIZE</b>
Routan	2009-On	12mm x 1.50
Sedan 4 Lug, Transporter Van	1968-1979	14mm x 1.50 Bolt
Tiguan	2009-On	14mm x 1.50 Bolt
Touareg	2003-On	14mm x 1.50 Bolt

## **VOLVO**

DL-240	1976-1986	1/2"
DL-240	1987-On	12mm x 1.50
740, 760, 780 & 940	ALL	12mm x 1.50
850, 880, 960		
S70, V70 Cross Country	ALL	12mm x 1.75
SC70	ALL	14mm x 1.50 Bolt
C30	2007-On	12mm x 1.50
C70	1993-2004	12mm x 1.75 Bolt
C70	2005	14mm x 1.50 Bolt
C70	2006-On	12mm x 1.50
S40, V40, V50	2000-On	12mm x 1.50
S60	1993-On	14mm x 1.50 Bolt
S80	2000-On	14mm x 1.50 Bolt
S90, V90	1984-2003	12mm x 1.50
V70	1993-1999	12mm x 1.75 Bolt
V70, XC60, XC70, XC90	2000-On	14mm x 1.50 Bolt

## Installation Instructions

1. Make sure wheel studs are clean and tight. Replace or tighten a problem stud.
2. Ensure the wheel is flat against mounting surface with studs through each hole.
3. All White Knight nuts should be hand started and then secured in a criss-cross sequence (see illustrations) with a torque wrench and socket. Refer to your vehicle owner's manual or wheel manufacturer's guide for proper torque specifications (see the torque chart below).
4. Check and retighten all nuts after 25 miles of driving and again after 50 miles, until wheel nut torque remains unchanged.

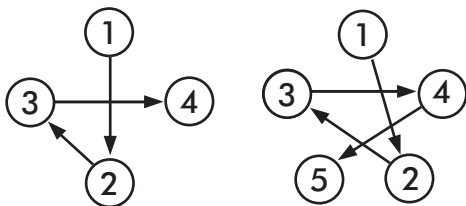

### TORQUE CHART (IN FOOT POUNDS)

LUG SIZE	7/16"	1/2"	9/16"	5/8"	10mm	12mm	14mm
TORQUE	70 ~ 80	75 ~ 85	135 ~ 145	150	45 ~ 55	70 ~ 80	85 ~ 90



**White Knight®**

**White Knight Wheel Accessories**

15325 Blackburn Ave.

Norwalk, CA 90650

(800) 343-8313

(562) 483-5217

(562) 483-5219 Fax

[www.whtknight.com](http://www.whtknight.com)

E mail: [sales@whtknight.com](mailto:sales@whtknight.com)